
INSTRUCTION MANUAL
**AEROSPEED
AEROBASE LINKS**



COMPATIBILITY

AEROSPEED LINKS AND AEROSPEED TENTS

Aerospeed 10 Aerobase Link – Aerospeed 10

Aerospeed 6 Aerobase Link – Aerospeed 6

Aerospeed 4 Aerobase Link – Aerospeed 4

AEROBASE AIR SHELTERS

Aerobase 3

Aerobase 3 Pro

INSTRUCTIONS

This Aerospeed Aerobase Link provides a weather tight connection between an Aerospeed Series tent and an Aerobase 3 or Aerobase 3 Pro Air Shelter.

Test Run

Practice attaching your Aerospeed Aerobase Link at home to ensure you understand the process.

Understanding the Conditions

Your Aerospeed Aerobase Link is designed to provide connection between an Aerospeed Air Tent and an Aerobase 3 or Aerobase 3 Pro Air Shelter.

While your Aerospeed Aerobase Link is designed to perform in most conditions, it is not designed to be used in very windy or stormy weather. During these conditions it is recommended that your Aerospeed Aerobase Link is removed to prevent damage to your tent.

Unpacking

When taking your Aerospeed Aerobase Link out for the first time, take a moment to see how it is packed or take a photo on your phone. This will help you when it comes to packing your Aerospeed Aerobase Link away.

Fitting the Aerospeed Aerobase Link

1. First pitch your Aerospeed Air Tent with the front awning door rolled up and secured.
2. Loosely fit the Aerospeed Aerobase Link over the main body of the Aerospeed tent and attach the yellow hooks at the end of the webbing straps to the yellow loops on the rear corners of the tent.
3. The loops are located on the corner guy rope attachment points.
4. Fit the eyelets that correspond to the front alloy brow pole, position over the end caps on the alloy brow poles already fitted to the tent.
5. Attach the large yellow ladder hooks 1 fitted to the link through the loops found at the corresponding points on the tent, both externally and internally between the tent fly and the link. Fasten the side release buckles located at the front feet of the tent to the link.
6. Pitch your Aerobase 3/Aerobase 3 Pro in front of your tent and in line with the Aerospeed Aerobase Link but do not at this stage place any of the pegs in the ground.
7. Zip the Aerospeed Aerobase Link to the entrance of the Aerobase 3 Air Shelter.
8. Move the shelter so that the link is pulled tight and aligned straight with the awning of the tent. Ensure the walls of the shelter sit square.
9. Once correctly aligned, peg the Aerobase 3/Aerobase 3 Pro into position with the corners forming a square.
10. Adjust the tension on the webbing straps for the Aerospeed Aerobase Link to secure in place.



NOTE: While the Aerospeed Aerobase Link is in use, it is not possible to zip the awning door closed around the Aerospeed Aerobase Link.

Packing Down

It is important to remove the Aerospeed Aerobase Link before deflating your tent. This will help prevent condensation from being trapped between the two layers. It will also help when pitching your tent next time.

Rolling Away

When rolling your Aerospeed Aerobase Link away, lay the carry bag down beside the link and fold it to 3/4 the length of the bag. It is a good idea to fold the Aerospeed Aerobase Link so that the webbing and hooks extend outside the fold. This will ensure they do not catch and tear the fabric when opening.

To prevent mildew, ensure that your Aerospeed Aerobase Link is dry when packing away. If you must pack your Aerospeed Aerobase Link up wet, hang out and air as soon as possible, mildew can develop within a few days.

Condensation

It is important that lower vents on your tent are opened at all times to reduce the risk of condensation. During humid or damp conditions, it is recommended that the window covers are opened to expose the mesh layer, enabling additional airflow throughout your tent. Do not use foam swabs or non-bonded mats directly on the tent floor. This will cause condensation between the mat and floor and if not dried out, can lead to mildew forming.

UV Degradation

Tent/link fabrics can be weakened by prolonged exposure to sunlight. Under normal holiday use, your Zempire® tent/link will give you many years of camping enjoyment. However, extended use in strong sunlight will cause degradation. It is recommended that during extended periods of strong sunlight a Zempire® Roof Cover is used to help protect from UV damage. UV degradation is not covered under warranty. The warranty does not cover permanent sites, displays or commercial use.

CARE INSTRUCTIONS

1. Never pack your Aerospeed Aerobase Link away wet. If you must take your Aerospeed Aerobase Link down when wet, ensure that it is dried completely as soon as possible to prevent mildew forming.
2. If mildew does form on your Aerospeed Aerobase Link, wash off with warm water and a soft brush to prevent further growth. Do not use soap or detergents.
3. This Aerospeed Aerobase Link is not designed to withstand storm conditions. During a severe storm, it is recommended that the Aerospeed Aerobase Link be taken down.
4. Do not leave your Aerospeed Aerobase Link connection pitched unnecessarily for extended periods of time. UV light damages the fly and will shorten the life of your setup.

2 Year Limited Warranty

Please take time to read about the protection we offer you.

All our products come with a guarantee designed to protect you as our valued customer. Zempire® Camping Equipment will repair or replace this product, at their discretion, should it fail due to faulty materials or manufacture for a period of 2 years from the date of purchase.

The Guarantee is subject to the following conditions:

1. The Guarantee only applies to an original purchaser who purchased this product in an unopened condition from an approved retail outlet.
2. The Guarantee does not apply if the product has been used for anything other than reasonable personal use. Commercial use (e.g. rental) or continuous use are expressly excluded.
3. Damage due to normal wear and tear, accident, acts of God, negligence (other than by Zempire® Camping Equipment), failure by the purchaser to ensure instructions for setting up and care are observed, deterioration due to abnormal exposure to ultraviolet light, damage from wind, insects, animals or mold/mildew, or any other cause reasonably beyond the control of Zempire® Camping Equipment are not covered.
4. If redress is sought under the terms of this Guarantee, then the product must be returned by the purchaser to the outlet from where it was purchased within the Guarantee period, in a clean, dry state and with proof of purchase.
5. All transport costs and any other indirect costs are excluded from the Guarantee.
6. Zempire® Camping Equipment reserves the right to make a reasonable charge for repairs which it determines are not within the scope of the Guarantee.
7. The Guarantee does not limit, modify or exclude any rights under any law if doing so would contravene that law or make any part of this Guarantee invalid. However, Zempire® Camping Equipment:
 - a) excludes (to the extent permitted by applicable law) all conditions and warranties that might otherwise be implied; and
 - b) limits its liability for breach of any such condition or Guarantee that it cannot exclude together with its liability under the Guarantee, to repairing or replacing the Goods or paying the cost of having the Goods repaired or replaced (at Zempire® Camping Equipment's option).

Australia Only

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

USA Only

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Europe Only

The consumer has legal rights under applicable national legislation governing the sale of consumer goods and those rights are not affected by the guarantee.

All warranty claim processes are explained on our Zempire® website /warranty and follow the instructions to lodge a warranty claim.

Sales Offices:

New Zealand & Australia
Zempire® Camping Equipment
6 Karewa Place, Pukete,
Hamilton, 3200, New Zealand
Ph: +64 7 848 1610

USA & Canada
Zempire® USA Inc.
22525 SE 64th Place, Suite 200
Issaquah, WA, 98027
Ph: +1 206 420 0391

Designed and tested in New Zealand. Made with care in China.

⚠ WARNING

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

i INFO

Please read this instruction manual carefully and follow all instructions, guidelines, and safety warnings.

Included in this product instruction manual are warnings and precautions in relation to the safe use, care, assembly, maintenance, and storage of this product. By using the product, you confirm that you have read the product instruction manual and understand all warnings and precautions and agree that the product shall only be used for the intended purpose and application in accordance with the instructions, guidelines, and warnings in this product instruction manual as well as in accordance with all applicable laws and regulations. A failure to read, understand and follow the instructions and warnings may result in death or injury to yourself and others as well as damage to your product.

This manual, including the instructions, guidelines, and warnings, and related documentation, may be subject to changes and updates.

These instructions MUST be kept with this product for future reference.

WARNING & SAFETY REFERENCE EXPLANATIONS

⚠ DANGER! – Safety instruction: Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

⚠ WARNING! – Safety instruction: Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

⚠ CAUTION! – Safety instruction: Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

ⓘ NOTICE! – Indicates a situation that, if not avoided, can result in property damage.

i NOTE! – Supplementary information for using the product.

⚠ DANGER

Failure to obey this instruction will cause death or serious injury.
HAZARD OF CARBON MONOXIDE POISONING



Never use fuel-burning appliances such as barbecues, gas heaters or gas cookers inside the tent/shelter. The burning process produces carbon monoxide which accumulates inside the tent/shelter and can cause death.

⚠ WARNING

Failure to obey these warnings could result in death or serious injury.
FIRE HAZARD

Do not cook inside the tent/shelter or use open flames.

⚠ WARNING

Failure to obey these warnings could result in death or serious injury.
BEWARE OF SUFFOCATION

Make sure ventilation openings are always open to avoid suffocation.

⚠ CAUTION

Failure to obey these cautions could result in minor or moderate injury.
INJURY RISK

This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and suitable knowledge, unless they have been given supervision or instruction by a person responsible for their safety.

Guy lines are a trip hazard, do not allow children to play near the tent and ensure that suitable protective footwear is worn.

Maintenance or cleaning of this tent/shelter is not to be undertaken by unsupervised children.

⚠ DANGER

Failure to obey this instruction will cause death or serious injury. **ELECTRIC SHOCK AND/OR ELECTROCUTION HAZARD**

- The use of the Power cord access points to run an extension cord into the tent/shelter may lead to electric shock, electrocution, fire or explosion hazards.
- **DO NOT** use any extension cord that is worn or damaged in anyway.
- **DO NOT** allow electrical devices, appliances, or extension cord to encounter condensation, water, or moisture inside the tent/shelter.
- Only use extension cords that are marked and certified for **OUTDOOR USE**.
- USA: Only connect extension cord to a 120 Volt GFCI (ground fault circuit interrupter) protected outlet with proper ground. If GFCI outlet is not available, use an extension cord with GFCI built in protection.
- AU/NZ: Only connect extension cord to a 240 Volt RCD (residual current device) protected outlet with proper ground. If RCD outlet is not available, use an extension cord with RCD built in protection.
- Ensure that the extension cord outside the tent/shelter is lower than the Power Cord entry into the tent so moisture will not travel along the cord and into the tent/shelter.
- Follow all instructions, warnings, and safety precautions from the manufacturer of the extension cord.
- Store tent/shelter and extension cord separately.

⚠ CAUTION

RISK OF INJURY AND MATERIAL DAMAGE

- Never open the zip on the protective sleeve around an air pole while the pole is inflated. This will result in the air pole bursting.
- Only inflate the air poles to the recommended pressure using the supplied (or Zempire recommended) pump.

i INTENDED USE

This product is suitable for:
Light to moderate weather and family camping.

This product is NOT suitable for: Use above the snowline or in severe winds, commercial use, or long-term pitching.

This product is suitable only for the intended purpose and application in accordance with these instructions. This manual provides information that is necessary for proper and correct use of the product.

Improper use or maintenance will result in diminished performance and potential failure.

The manufacturer accepts no liability for any injury or damage to the product resulting from:

- Incorrect assembly or usage.
- Incorrect maintenance or use of spare parts other than original spare parts recommended and supplied by the manufacturer.
- Alteration to the product without express permission from the manufacturer.
- Use for purposes other than those described in this manual.

Zempire® reserves the right to change product appearance and product specifications.

i NOTICE

MATERIAL DAMAGE

- During setup **DO NOT** open or close the zippers by force.
- During packdown **DO NOT** use force when dismantling the tent/shelter. Otherwise, you might damage fabric and other components.

CLEANING & MAINTENANCE: FABRIC DAMAGE

- **DO NOT** use sharp or hard objects or cleaning agents for cleaning.
- **DO NOT** use mineral-based, soaps, chemicals, or detergents for cleaning.
- Gently remove tree sap and bird droppings from the fabric as soon as possible to avoid permanent damage to the material.
- If necessary, clean the fabric with clean water and a soft bristled brush.

i STORAGE

Fully set up the tent/shelter for cleaning. Choose a sunny day for cleaning to ensure the material will dry thoroughly.

Clean the tent/shelter thoroughly, including the inside to be sure no food etc is left inside to attract rodents etc.

Air the tent/shelter fully and ensure the tent is totally dry before packing away. Store in a well-ventilated dry place inside the supplied carry bag.

i DISPOSAL



Recycle all packaging material.



Do not discard into normal household garbage or landfill. Please contact local recycling facilities to recycle.