

## 1 Year Limited Warranty

### **Please take time to read about the protection we offer you.**

All our products come with a guarantee designed to protect you as our valued customer. Zempire® Camping Equipment will repair or replace this product, at their discretion, should it fail due to faulty materials or manufacture for a period of 1 year from the date of purchase.

The Guarantee is subject to the following conditions:

1. The Guarantee only applies to an original purchaser who purchased this product in an unopened condition from an approved retail outlet.
2. The Guarantee does not apply if the product has been used for anything other than reasonable personal use. Commercial use (e.g. rental) or continuous use are expressly excluded.
3. Damage due to normal wear and tear, accident, acts of God, negligence (other than by Zempire® Camping Equipment), failure by the purchaser to ensure instructions for setting up and care are observed, deterioration due to abnormal exposure to ultraviolet light, damage from wind, insects, animals or mold/mildew, or any other cause reasonably beyond the control of Zempire® Camping Equipment are not covered.
4. If redress is sought under the terms of this Guarantee, then the product must be returned by the purchaser to the outlet from where it was purchased within the Guarantee period, in a clean, dry state and with proof of purchase.
5. All transport costs and any other indirect costs are excluded from the Guarantee.

6. Zempire® Camping Equipment reserves the right to make a reasonable charge for repairs which it determines are not within the scope of the Guarantee.

7. The Guarantee does not limit, modify or exclude any rights under any law if doing so would contravene that law or make any part of this Guarantee invalid. However, Zempire® Camping Equipment:

- a) excludes (to the extent permitted by applicable law) all conditions and warranties that might otherwise be implied; and
- b) limits its liability for breach of any such condition or Guarantee that it cannot exclude together with its liability under the Guarantee, to repairing or replacing the Goods or paying the cost of having the Goods repaired or replaced (at Zempire® Camping Equipment's option).

### **Australia Only**

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### **USA Only**

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### **Europe Only**

The consumer has legal rights under applicable national legislation governing the sale of consumer goods and those rights are not affected by the guarantee.

All warranty claim processes are explained on our Zempire® website **/warranty** and follow the instructions to lodge a warranty claim.

### **Sales Offices:**

#### **New Zealand & Australia**

Zempire® Camping Equipment  
6 Karewa Place, Pukete,  
Hamilton, 3200, New Zealand  
Ph: +64 7 848 1610

#### **USA & Canada**

Zempire® USA INC.  
22525 SE 64th Place, Suite 200  
Issaquah, WA, 98027  
Ph: +1 206 420 0391

**Designed and tested in New Zealand.  
Made with care in China.**



This product contains a lithium-ion battery. Do not discard into normal household garbage or landfill. Please contact local recycling facilities to recycle.

AS PART OF OUR  
**ZEMPIRE FAMILY,**  
SHARE YOUR  
**CAMPING MOMENTS**  
ON SOCIAL



@zempirecamping  
#zempirefamily



**MEGADOME 500**  
RECHARGEABLE LANTERN

**MEGADOME 300**  
RECHARGEABLE LANTERN

**MEGADOME 150**  
RECHARGEABLE LANTERN

INS-MDC-001A




### **IMPORTANT**

Please read and understand these instructions before attempting to use this lantern. Follow all safety precautions, care and maintenance tips.

## COMPONENTS

- 1 ON/OFF Switch & Lumen Setting
- 2 Charging Port
- 3 Charging Port Cover
- 4 LED Charge Indicators
- 5 Hanging Cord
- 6 Hanging Hook
- 7 Metal Hook
- 8 Hook Lock/Release Button
- 9 Cord Grip
- 10 USB-C Type Charging Cable

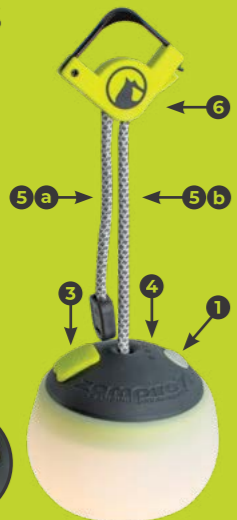

### ⚠ WARNING

*The user must read the instruction manual to reduce the risk of injury or damage.*

- The batteries cannot be removed or replaced.
- To avoid the risk of electric shock do not use damaged powercords. Damaged power cords should be discarded.
- The appliance must be stored in a dry location.
- The appliance is only to be used with the power supply unit provided with the appliance.
- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- This appliance contains non-replaceable battery.
- The battery is to be disposed of safely.
- **WARNING:** To recharge the battery, only use the detachable supply unit provided with this appliance.
- The recommended charging temperature range is 0°C to 32°C//32°F to 89°F.

## CHARGING

It is important to fully charge the unit before using your Megadome lantern for the first time. Your Megadome lantern is supplied with a USB-C Type charging cable 10.

Open the green charging port cover 3 and insert the USB-C plug into the charging port 2, taking care that the plug is correctly aligned with the port. Insert the USB charger cable into an approved USB charger device with a minimum output of 5 Volts – 1.5 amp.

During the charging process, the LED charge indicators 4 will flash green to indicate the level of charge. Once fully charged, all LED charge indicators will illuminate solid green.

The charging process will take around:

- 6-7 hours for Megadome 500
- 4-5 hours for Megadome 300
- 2 hours for Megadome 150

Charging is to be carried out indoors only to avoid an electric shock hazard. Please do not place the lantern on a surface where it may fall or tumble into water or other liquids.

## OPERATION

To operate your Megadome lantern, simply press the ON/OFF switch 1 slowly through the different light settings until you find the desired light intensity. As you cycle through the different settings, the LED charge indicators 4 will illuminate to show the current charge level for around 8 seconds.

## HANGING HOOK

**To hang** – To open the hanging hook 6, press the hook lock/release button 8 and gently pull the metal hook 7 up. Once hung, close and lock by pressing the hook lock/release button 8 and shutting the metal hook 7 back into the latch. Be sure to hold the hook lock/release button 8 so the metal hook fits underneath the button latch, then release the button to lock. **IMPORTANT:** Release the lantern only when the metal hook 7 is locked shut to prevent risk of damaging the hook.

**To adjust height** – Pull the cord 5a outwards, so it comes free from the cord grip 9. Pull down on the cord 5a to increase lantern height, or pull the hanging hook 6 up to lower the lantern's height. Once preferred height is reached, lock the same cord 5a back into the cord grip 9 by pulling close to the other cord 5b and back into the grip.

## POWER BANK

When using your Megadome as an external power supply, insert the USB cable from the device to be charged into the charging port 2, taking care that the plug is correctly aligned with the port. During the charging process, the LED charge indicators 4 will illuminate green to show the current charge level.

## GENERAL CARE

Always ensure that the lantern is charged regularly, even if not in use. This will help retain the battery's memory and ensure long life and continued usability. **Lithium-ion batteries must be stored in a charged state, ideally at least 40 per cent capacity or more.** This prevents the battery from losing charge and triggering sleep mode. Charging is recommended at least every two months. Store in a cool, dry environment.

IPX4 weather protection offers decent protection against splashing water. Remember, this isn't waterproof – DO NOT immerse the Megadome lantern in water or leave it exposed to the elements.

Take care to keep your Megadome lantern clean and dry. Clean with a soft cloth and dry straight away. Avoid excess water, and do not use harsh cleaning agents or applicators.